

**RECOMMENDATIONS:** **1.** The first time you use your new appliance, leave the oven on for 1 hour without anything in it, to remove all traces of smoke and odours. **2.** When cooking is done, the fan stays on until the oven cools down. **3.** To clean your oven, avoid using abrasive or corrosive cleaning products. **4.** Do not line the oven with aluminium foil or other similar material.

## FIRST TURNING ON THE APPLIANCE

- Turn **B** to select the language, press **B** to confirm the setting.
- Turn **B** to select the time in hours, press **B** to confirm. Repeat the action for setting the minutes.
- Turn **A** to the left to exit the tools.

## TO START COOKING

- Turn **B** to select a cooking function, press **B** to start the cycle.

## TO CANCEL A TOOL / TO STOP THE OVEN

- Turn to the left **A** till the display indicates "**STOP**"; press **A** or **B** to confirm.

## TO PROGRAM/MODIFY THE COOKING TIME

After the cooking starts:

- Turn to the right **A** till the display indicates "**TIME**";
- Turn **B** to select duration or start, press **B** to confirm.

After selected duration:

- Turn **B** to select the time in hours and press **B** to confirm and repeat this action for the minutes.

After selected start:

- Turn **B** to select the time in hours and press **B** to confirm and repeat this action for the minutes.

In both the cases it's possible to choose cooking end:

- Turn **B** to select end,

## TO MODIFY THE TEMPERATURE

After the cooking starts:

- Turn to the right **A** till the display indicates "**TEMPERATURE**";
- Turn **B** to adjust the temperature, press **B** to confirm the setting.

## TO START PYROLYSIS


- Turn to the right **A** till the display indicates "**PYROLYSIS**";
- Turn **B** to select the level of the self cleaning function, press **B** to confirm.

press **B** to confirm the choice.

- Turn **B** to select the time in hours and press **B** to confirm and repeat this action for the minutes.

If you don't want to select the cooking end:

- Turn to the left **A** to go back to the main menu.

For the **SUCCES** function , the oven automatically manages all the cooking parameters; the cooking time and temperature adjustment are unavailable.